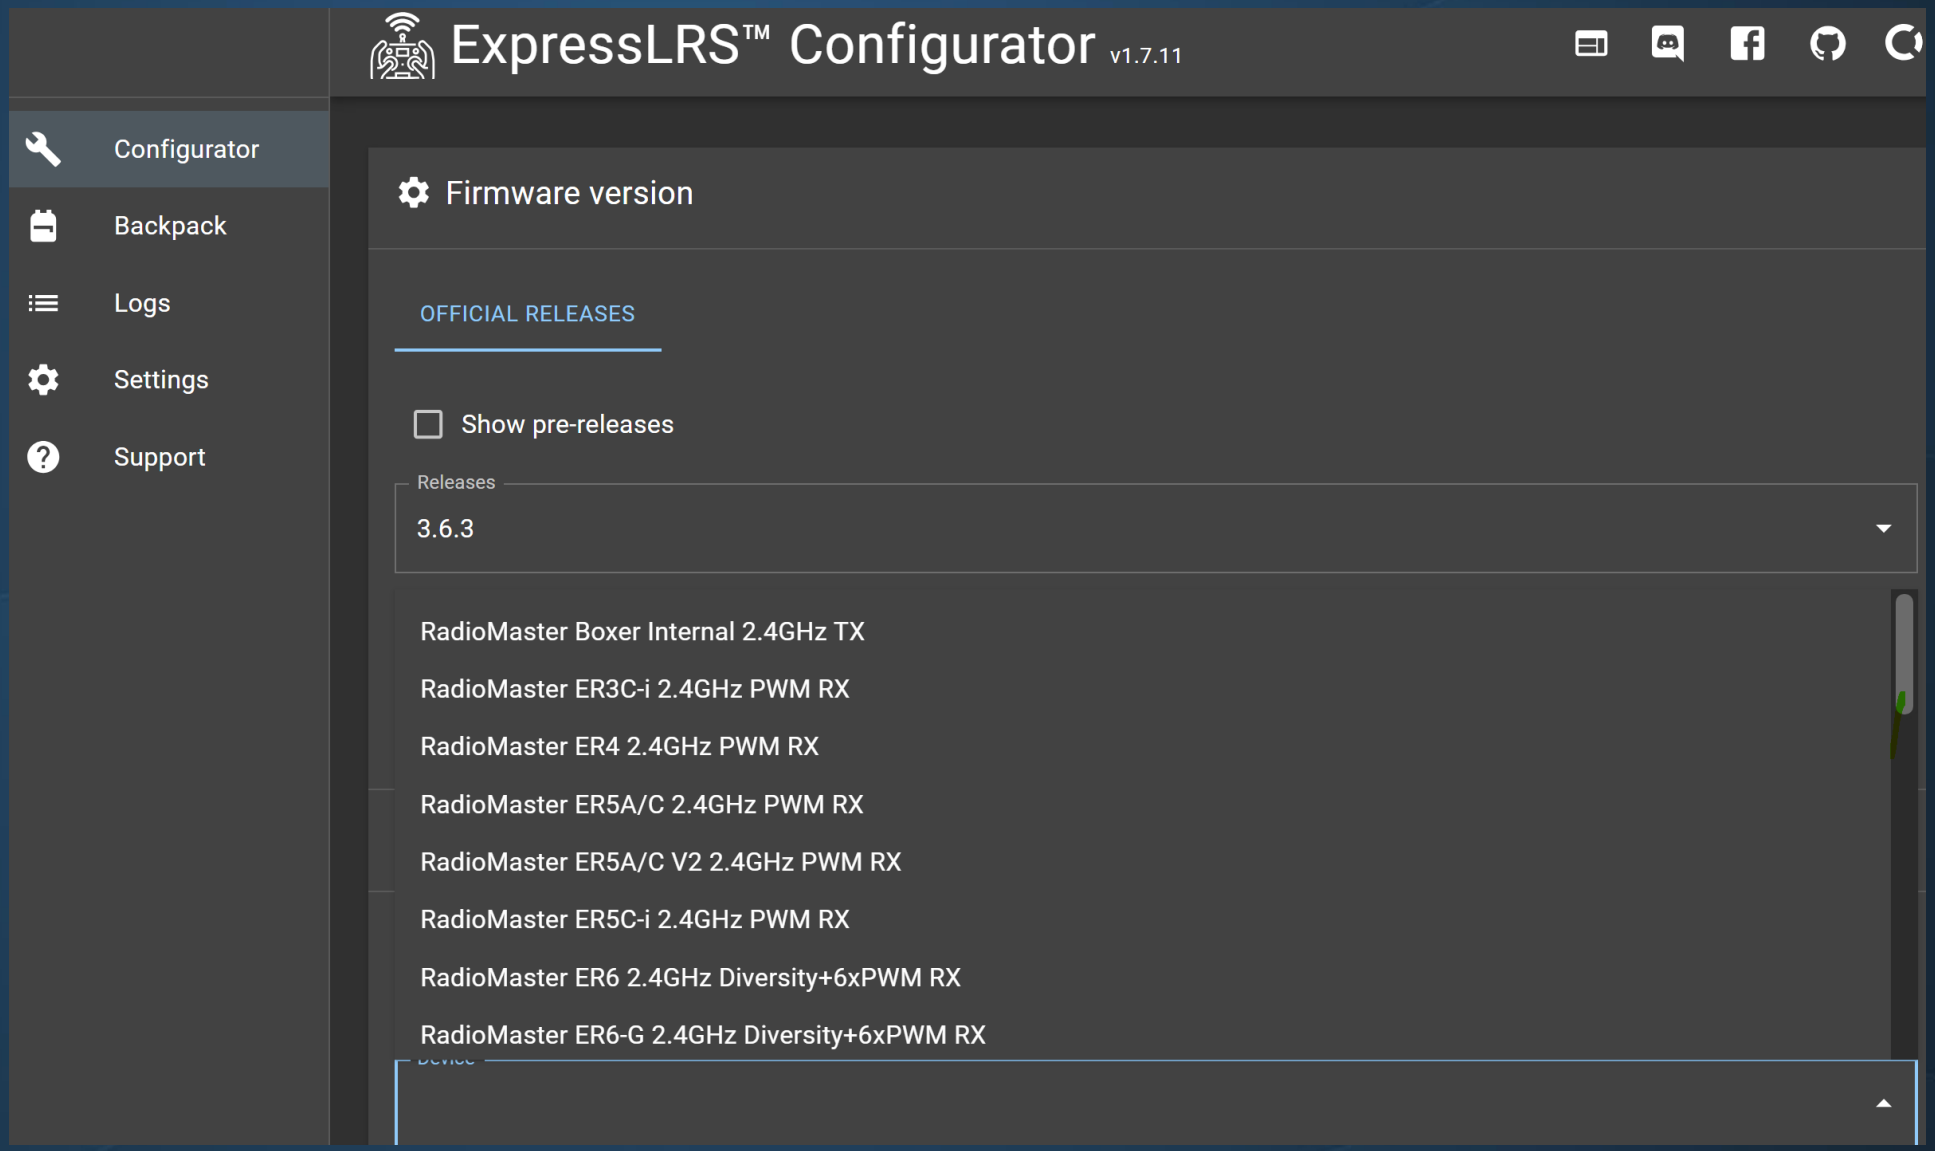
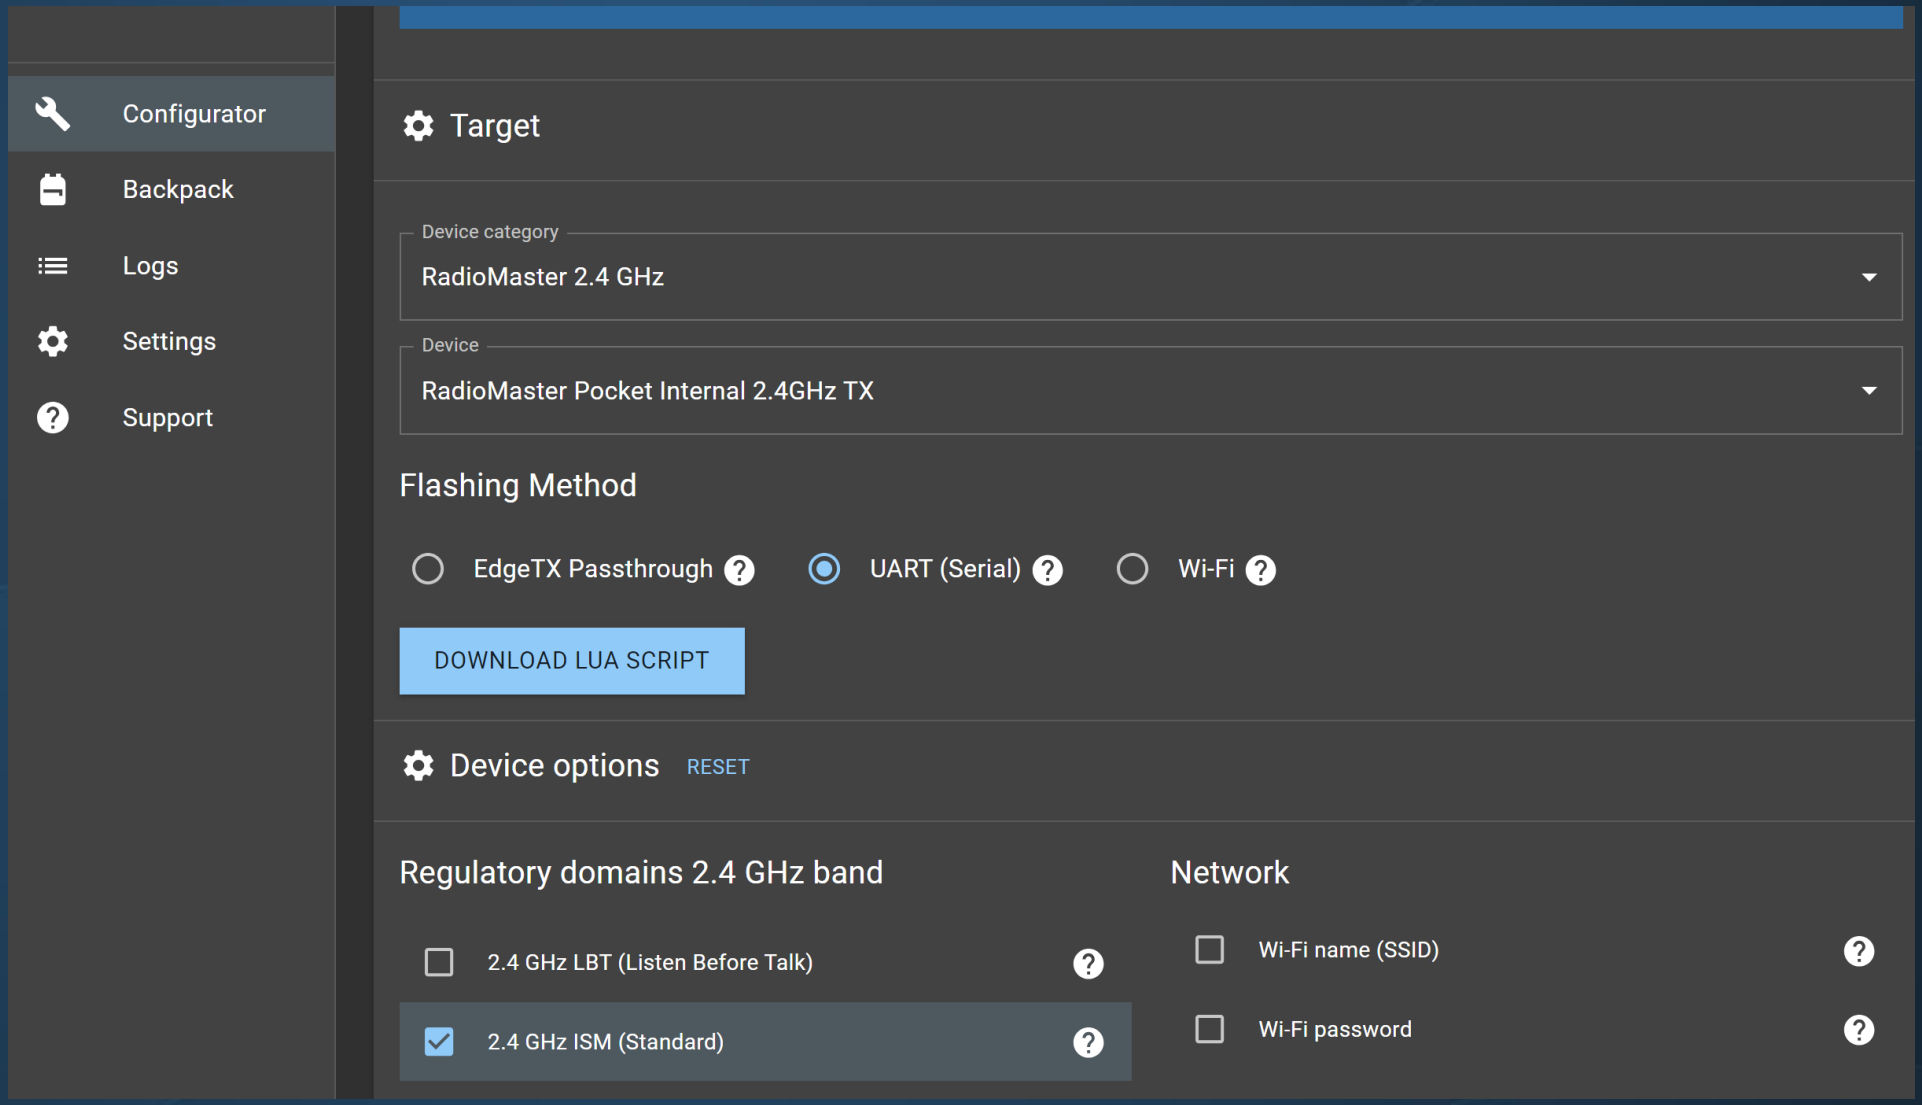
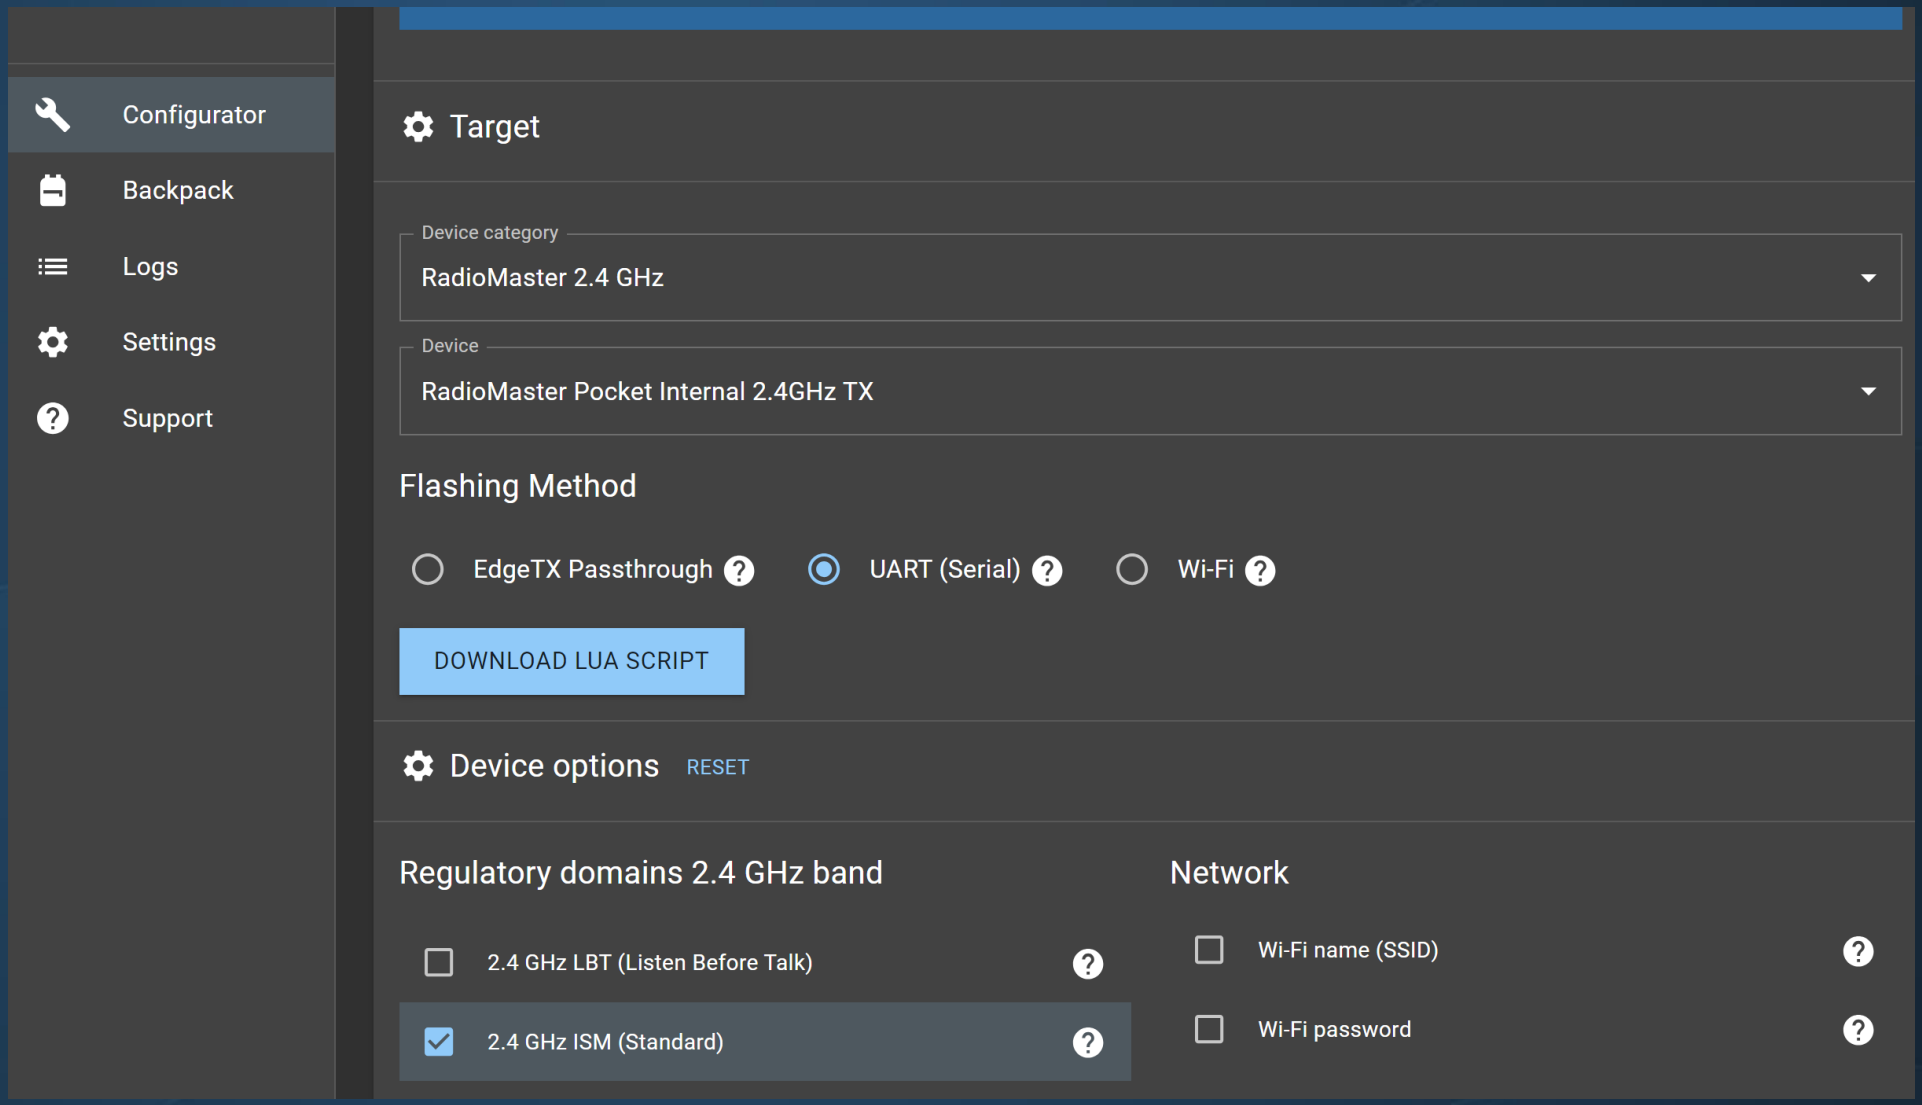
ELRS Part 2

Flashing the Transmitter Firmware

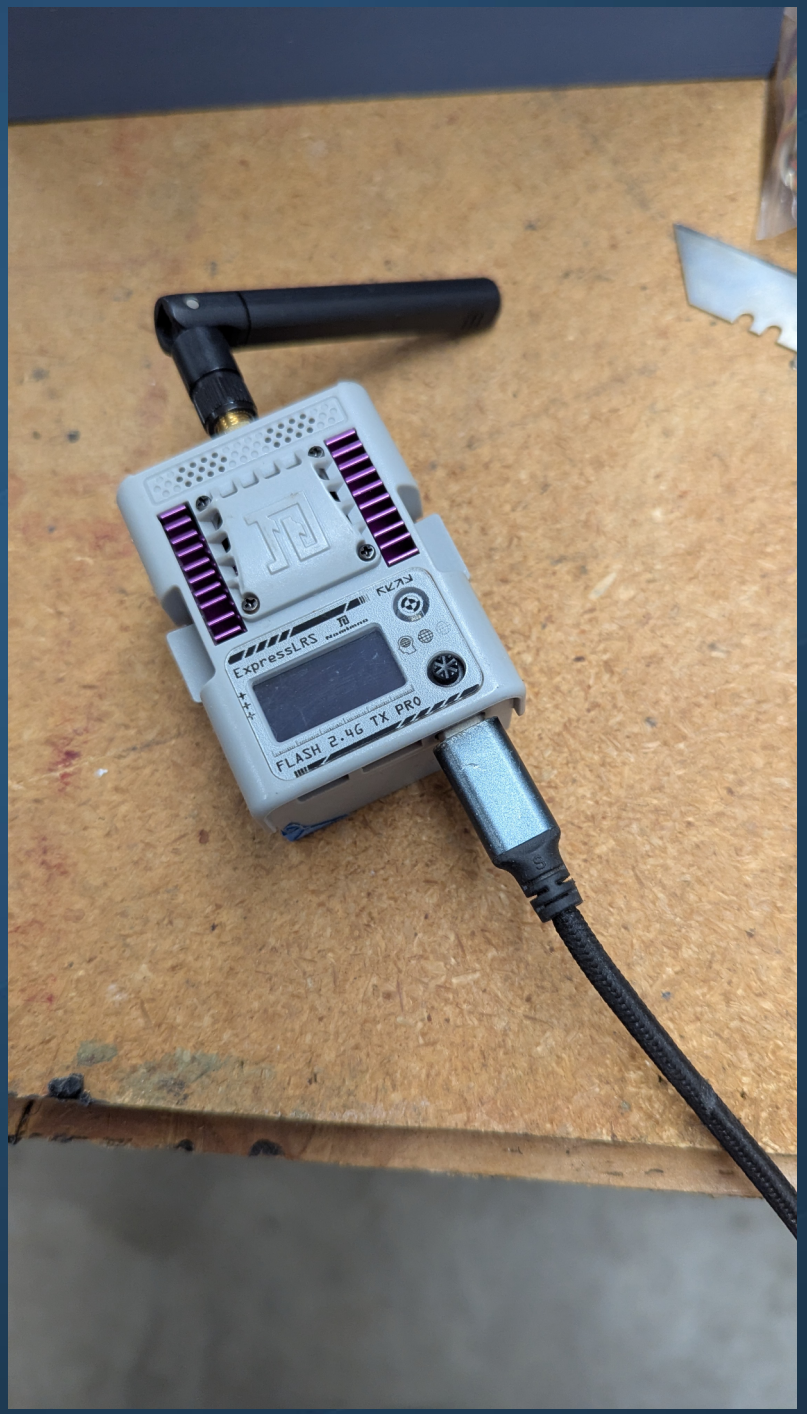
Dan Benson


ExpressLRS™ Configurator v1.7.11
Configurator
Backpack
Logs
Settings
Support
Firmware version
OFFICIAL RELEASES
Show pre-releases
Releases
3.6.3
RadioMaster Boxer Internal 2.4GHz TX
RadioMaster ER3C-i 2.4GHz PWM RX
RadioMaster ER4 2.4GHz PWM RX
RadioMaster ER5A/C 2.4GHz PWM RX
RadioMaster ER5A/C V2 2.4GHz PWM RX
RadioMaster ER5C-i 2.4GHz PWM RX
RadioMaster ER6 2.4GHz Diversity+6xPWM RX
RadioMaster ER6-G 2.4GHz Diversity+6xPWM RX


Configurator
Backpack
Logs
Settings
Support
Target
Device category
RadioMaster 2.4 GHz
Device
RadioMaster Pocket Internal 2.4GHz TX
Flashing Method
EdgeTX Passthrough
UART (Serial)
Wi-Fi
DOWNLOAD LUA SCRIPT
Device options
RESET
Regulatory domains 2.4 GHz band
2.4 GHz LBT (Listen Before Talk)
2.4 GHz ISM (Standard)
Network
Wi-Fi name (SSID)
Wi-Fi password


Configurator
Backpack
Logs
Settings
Support
Target
Device category
RadioMaster 2.4 GHz
Device
RadioMaster Pocket Internal 2.4GHz TX
Flashing Method
EdgeTX Passthrough
UART (Serial)
Wi-Fi
DOWNLOAD LUA SCRIPT
Device options
RESET
Regulatory domains 2.4 GHz band
2.4 GHz LBT (Listen Before Talk)
2.4 GHz ISM (Standard)
Network
Wi-Fi name (SSID)
Wi-Fi password


ExpressLRS
FLASH 2.4G TX PRO


ExpressLRS
FLASH 2.4G TX PRO

ExpressLRS™

WEB FLASHER

Git: 6

1 Hardware — 2 Options — 3 Flashing

Releases

Hardware Selection

Choose the vendor specific hardware that you are flashing, if the hardware is not in the list then the hardware is unsupported.

Hardware Selection

Choose the vendor specific hardware that you are flashing, if the hardware is not in the list then the hardware is unsupported.

Firmware Version
4.0.1

Hardware Vendor
NamimnoRC

Radio Frequency
2.4GHz Transmitter

Hardware Target
NamimnoRC Flash OLED 2.4GHz TX

Download ELRS Lua Script

Previous

Next

Transmitter Options

Set the flashing options and method for your **NamimnoRC Flash OLED 2.4GHz TX**

UID: 45,204,51,53,75,165
2crazy4U!

Region
FCC

WiFi SSID

WiFi Password

Flashing Method

Advanced Settings

Clear Stored Settings

Flash Firmware File(s)

The firmware file(s) have been configured for your **NamimnoRC Flash OLED 2.4GHz TX** with the specified options.

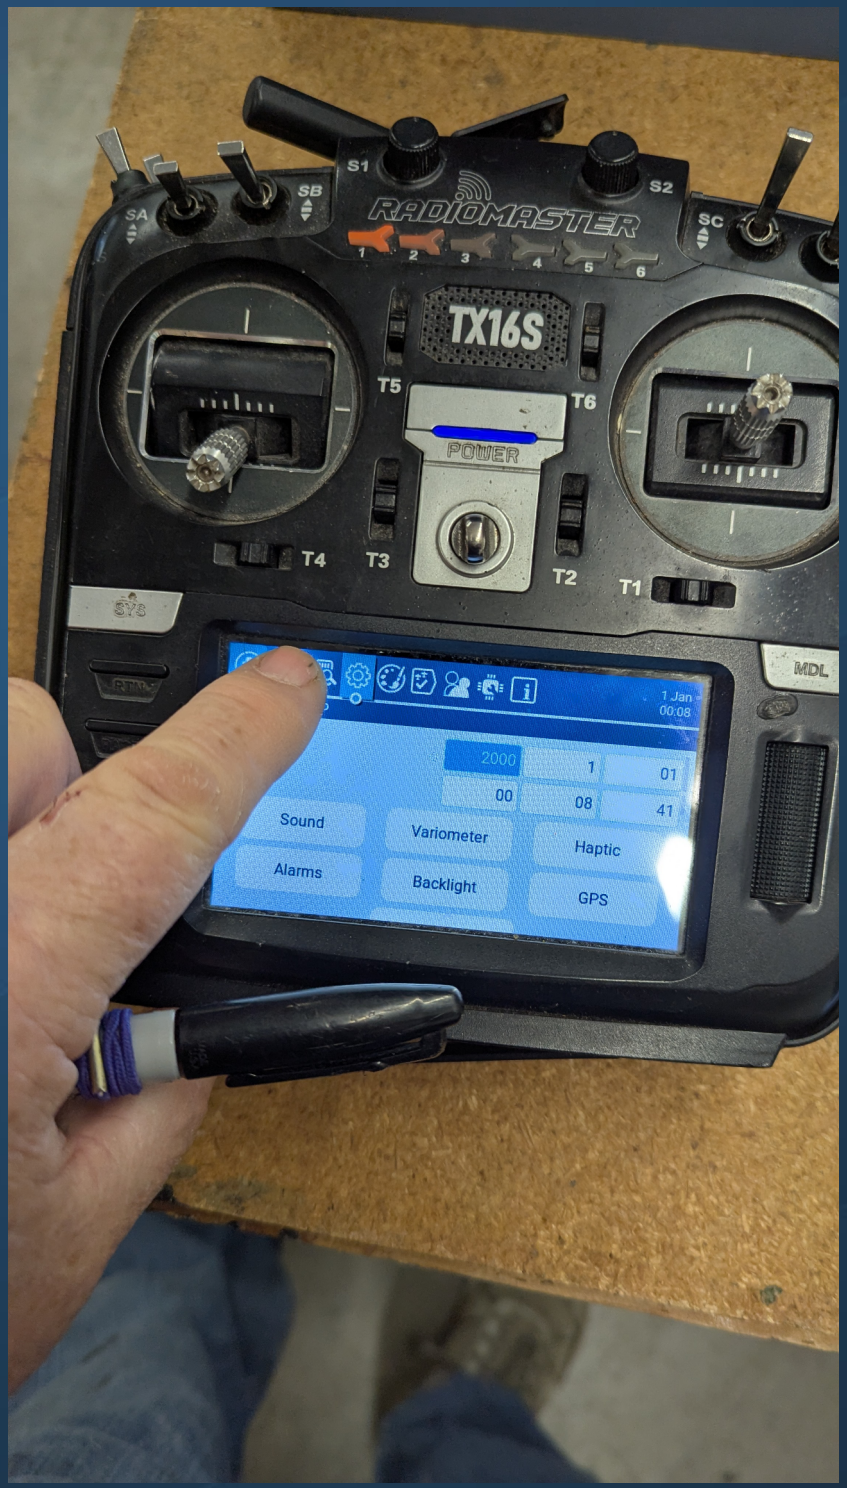
- Connect to serial UART
- Enter flashing mode
- Flashing
- Done

Flash Another

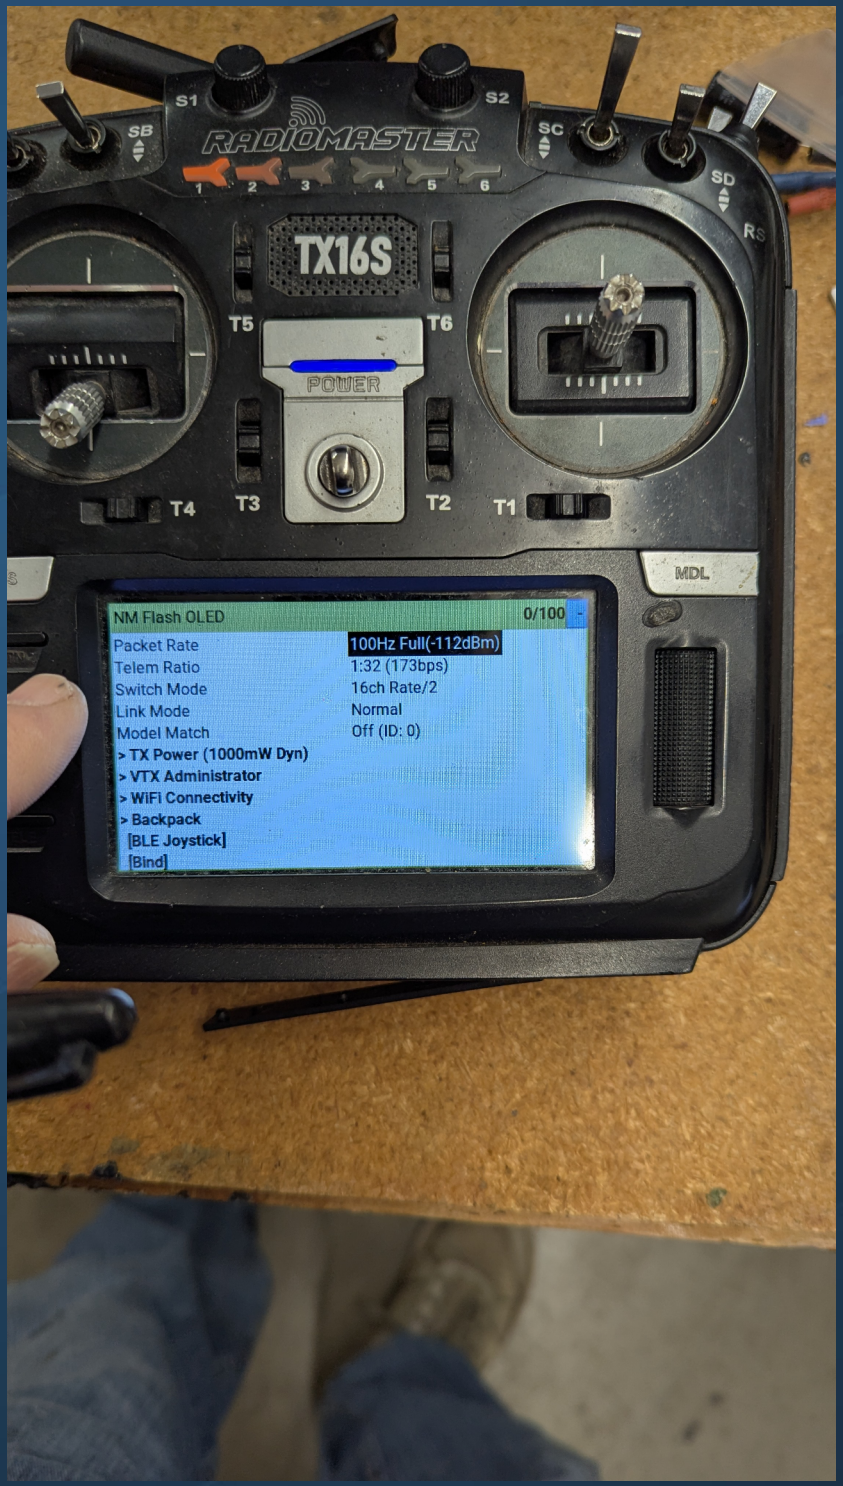
Back to Start

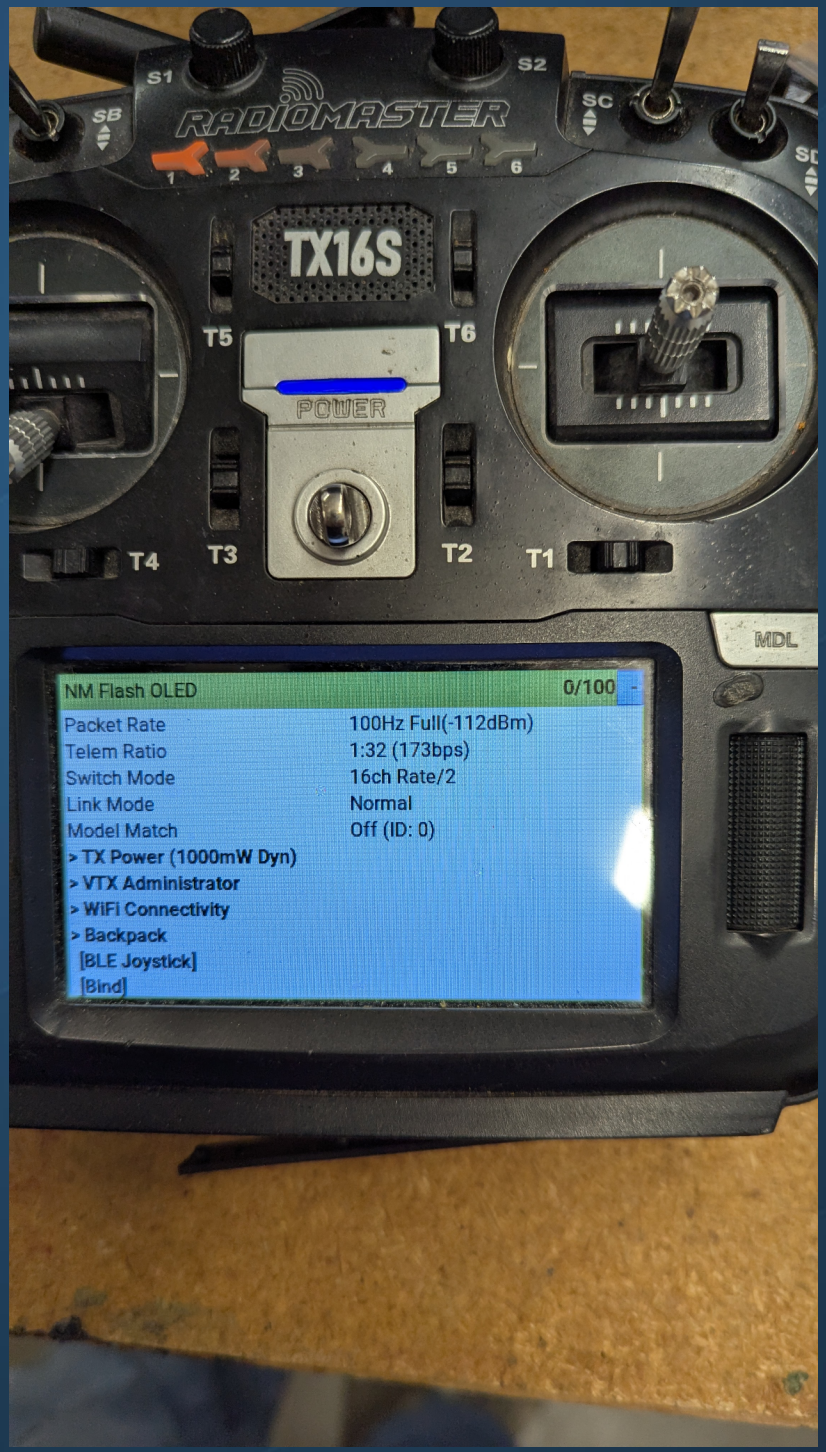

RADIOMASTER
TX16S
POWER
MDL
EDGE TX
Manage Models
Channel Monitor
Model Settings
Screens Settings
Reset Telemetry
Statistics


RADIOMASTER
TX16S
POWER
MDL
RTN
1 Jan
00:07
RADIO SETUP
Date
2000
1
01
Time
00
07
54
Sound
Variometer
Haptic
Alarms
Backlight
GPS


RADIOMASTER
TX16S
S1
S2
SA
SB
SC
T1
T2
T3
T4
T5
T6
POWER
SYS
MDL
1 Jan
00:08
2000
1
01
00
08
41
Sound
Variometer
Haptic
Alarms
Backlight
GPS


RADIOMASTER
TX16S
POWER
MDL
TOOLS
1 Jan
00:08
Crossfire configure
DSM AR636 Telemetry
DSM Forward Programming
DSM Smart RX Telemetry
ExpressLRS
Flights History v1.1
FrSky GaSuite
FrSky S8R/S6R Calibrate


RADIOMASTER
TX16S
S1
S2
SB
SC
SD
1 2 3 4 5 6
T5
T6
POWER
T4
T3
T2
T1
MDL
NM Flash OLED
0/100
Packet Rate
100Hz Full(-112dBm)
Telem Ratio
1:32 (173bps)
Switch Mode
16ch Rate/2
Link Mode
Normal
Model Match
Off (ID: 0)
> TX Power (1000mW Dyn)
> VTX Administrator
> WiFi Connectivity
> Backpack
[BLE Joystick]
[Bind]


RADIOMASTER
TX16S
S1
S2
SB
SC
SD
1
2
3
4
5
6
T5
T6
POWER
T4
T3
T2
T1
MDL
NM Flash OLED
0/100
Packet Rate
100Hz Full(-112dBm)
Telem Ratio
1:32 (173bps)
Switch Mode
16ch Rate/2
Link Mode
Normal
Model Match
Off (ID: 0)
> TX Power (1000mW Dyn)
> VTX Administrator
> WiFi Connectivity
> Backpack
[BLE Joystick]
[Bind]

NO.	Parameter	Note
1	BFPV SuperG2 G4	Products Name, up to 15 characters.
2	0/250	Drop ratio of the communication between radio control and module. i.e. the TX module received 250 packets and lost 0 packets.
3	C/-	C： Connected. -： Unconnected.
4	Packet Rate	Packet rate of communication between module and receiver, and the shorter the in terval between remote control packets sent by the transmitter, the more precise the control is.
5	Telem Ratio	Receiver telemetry ratio. For example, 1:64 means that the receiver will send one telemetry packet back for every 64 remote control packets it receives.